

LPA Light Pole Arrestor


LPA-480-100-RL



▶ INSTALLATION INSTRUCTIONS

1. Remove electrical cover plate screw
2. Pull wires out of Light Pole and identify the following wires:: Phase 1, Phase 2, Ground wires
3. Remove twist cap on first phase wire,
4. Connect L1 wire from LPA to Phase 1 wire.
5. Remove twist cap on second phase wire
6. Connect L2 wire from LPA to phase 2 wire
7. Remove twist cap on Ground wire
8. Connect Green Ground wire to Pole Ground wire

▶ TYPICAL INSTALLATION

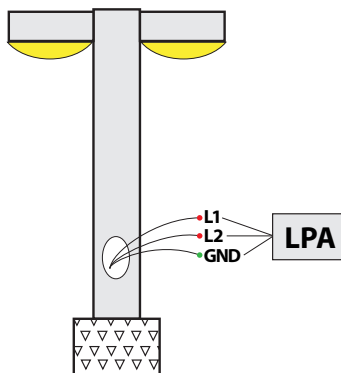

▶ FEATURES AND BENEFITS

- Provides 30kA amps single-pulse surge current Line to Neutral or Line to Ground
- Discrete protection on both Line to Ground and Line to Line
- Protects facilities parking lot lighting against lightning transients
- Protects Point of Equipment like well pumps, motors and computer equipment
- Includes pre-wired pigtails to facilitate quick installations
- Fail Safe Open – Meets UL 1449 3rd Edition Sept 2009
- Indicator Light can be installed remotely
- Remote Relay Option (both NC & NO contacts)
- 5 Year Warranty*

▶ MECHANICAL SPECIFICATIONS

Dimensions	3" x 2" x 2"
Weight	15 oz
Enclosure	Plastic UL-94VO
Operating Temp	-40C to +60C
Non-condensing Humidity	5% to 95%

▶ ELECTRICAL SPECIFICATIONS

Connection Method	Parallel
Protection Modes	L-L, L-G or L-N
Pre-wired	18" stranded #12 AWG
Status Indicators	Local & Remote LED option
Dry Contacts	Form C NC & NO

Specifications are subject to change without notice

MODEL NUMBER	SYSTEM VOLTAGE	SYSTEM CONFIGURATION	PROTECT MODE	MCOV	SVR
LPA-480-100	480V	2 Wire +G	L-L	625	1600
			L-G	625	1600
LPA-240-100	240V	2 Wire +G	L-L	320	700
			L-G	320	700

OPTIONS:

- CN 1/2" Chase Mounting Nipple
- RL Remote Status LED
- RR Remote Relay Board with both NC & NO dry contacts

All tests were performed with 6" lead lengths, positive polarity. All voltages measured from the zero reference point.

*See Warranty for details